

SEAT BRACE ADAPTER KIT - INSTALLATION INSTRUCTIONS
(fits Brey-Krause harness mounts with adapter tabs)

Note: This kit adapts Brey-Krause part# R-9020 and R-9019 seat braces to Brey-Krause harness mounts equipped with seat brace tabs.

Step 1.

Position spacers between existing tabs located on the harness mount bar. (See drawing #1)

Step 2.

Position mounting plates (2) to the outside of the mounting tabs and install (2) 3/8-24 bolts with washer thru the plates, tabs and spacers as shown below. Secure with 3/8 lock nut & washer. - (Do not tighten at this time.) Note: these plates can be installed two different ways. Find the position that works best with your combination. This will become evident as you position the seat brace relative to the seat. (See drawing #2).

Step 3.


Adjust the seat to driving position.

Step 4.

Position seat brace between mounting plates and against the seat back. Align the holes in the mounting plates with the holes in the seat brace and attach with supplied 5/16" bolts, washers and nuts. With the brace still aligned, tighten the 3/8" bolts first, then tighten the 5/16" bolts.

(See drawing #3)

Step 5.

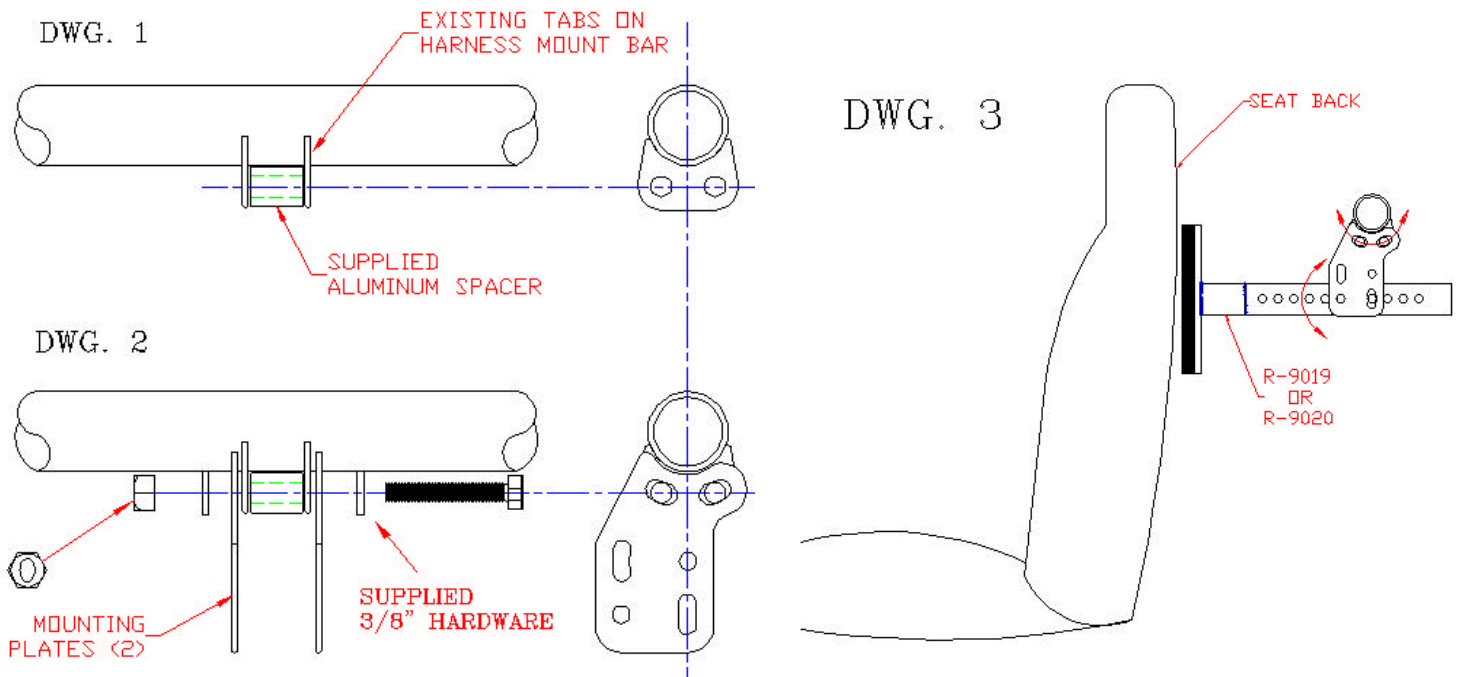

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.