

R-9001/R-9002

R-9001 Tunnel Side Lap Belt Mount
*R-9002 Additional Hardware Kit for '85 - '89 models

TUNNEL SIDE LAP BELT MOUNT

*(1985-1989 models require additional hardware kit model R-9002)

The Brey-Krause tunnel side lap belt mount provides a mounting point for snap in lap belts without having to drill holes through the body shell. Note: this product is designed for driver's ed use.

Step 1

Remove seat track to floor mounting bolts and position seat to gain access to tunnel side seat belt mount located on inside seat track.

Step 2

Remove factory bolt and washer that anchors the factory seat belt.

Step 3


Verify the style (A or B) of the mounting point on the seat rail as shown below. If the mounting bracket does not have a shoulder that the factory belt fits over, then the R-9002 hardware kit will be necessary for proper installation. It is the responsibility of the installer to verify proper thread engagement of the supplied hardware.

Step 4

Reinstall seat.

For a style A (with shoulder '90 & newer) replace bolt and washer with Brey-Krause components supplied with R-9001 as shown below.


STYLE A ('90 and newer models)

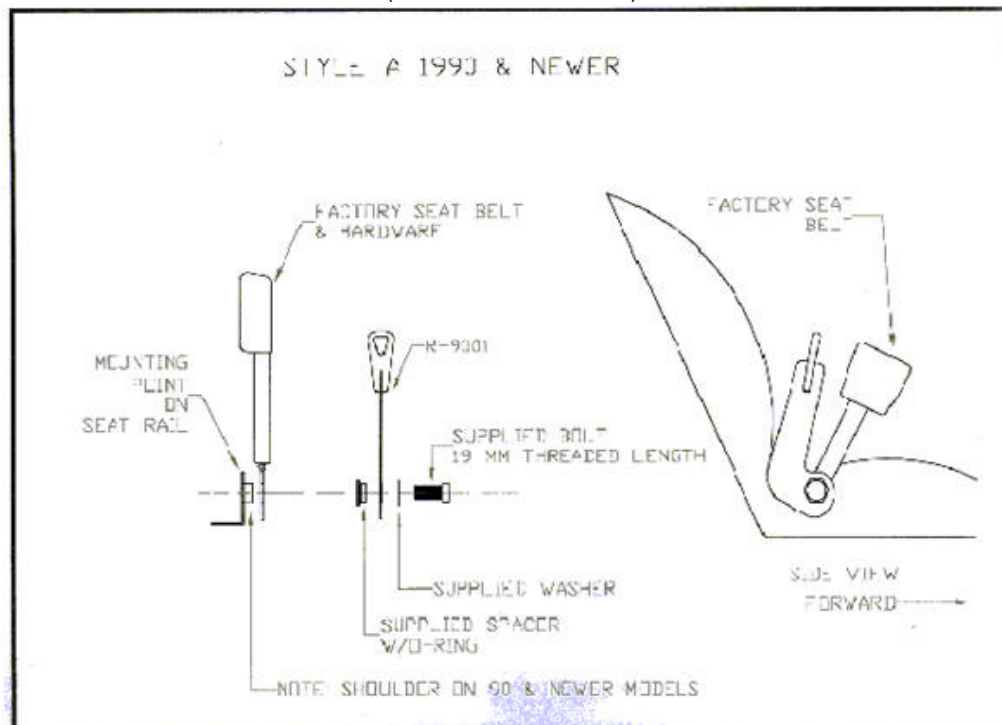

Style A

For a style B (without shoulder '85 - '89 models) replace factory hardware with Brey-Krause components supplied with R-9001 and R-9002 shown below.

STYLE B
('85 - '89 models)

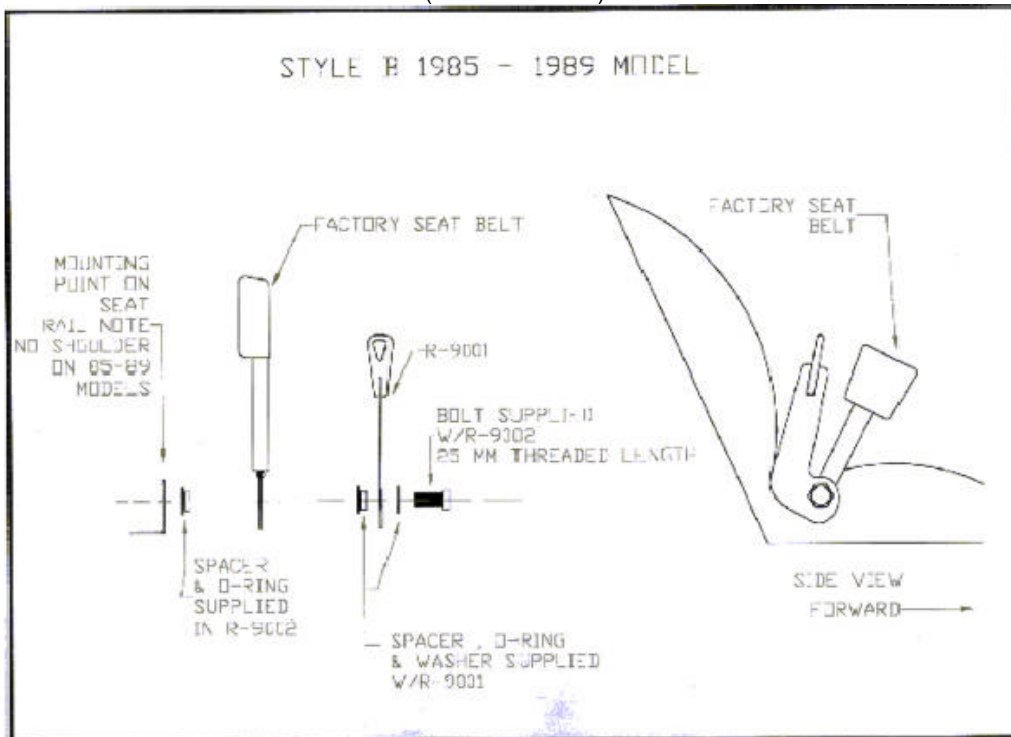

Style B

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.